Warranty Information

This product has a limited 1 year warranty in North America and Australia.
For information on warranty periods in other regions, please contact your reseller or SilverStone authorized distributor.

Warranty terms & conditions

1. Product component defects or damages resulted from defective production is covered under warranty.
   Defects or damages with the following conditions will be fixed or replaced under SilverStone Technology's jurisdiction.
a) Usage in accordance with instructions provided in this manual, with no misuse, overuse, or other inappropriate actions.
b) Damage not caused by natural disaster (thunder, fire, earthquake, flood, salt, wind, insect, animals, etc…)
c) Product is not disassembled, modified, or fixed. Components not disassembled or replaced.
d) Warranty mark/stickers are not removed or broken.
   Loss or damages resulted from conditions other than ones listed above are not covered under warranty.

2. Under warranty, SilverStone Technology's maximum liability is limited to the current market value for the product (depreciated value, excluding shipping, handling, and other fees). SilverStone Technology is not responsible for other damages or loss associated with the use of product.

3. Under warranty, SilverStone Technology is obligated to repair or replace its defective products. Under no circumstances will SilverStone Technology be liable for damages in connection with the sale, purchase, or use including but not limited to loss of data, loss of business, loss of profits, loss of use of the product or incidental or consequential damage whether or not foreseeable and whether or not based on breach of warranty, contract or negligence, even if SilverStone Technology has been advised of the possibility of such damages.

4. Warranty covers only the original purchaser through authorized SilverStone distributors and resellers and is not transferable to a second hand purchaser.

5. You must provide sales receipt or invoice with clear indication of purchase date to determine warranty eligibility.

6. If a problem develops during the warranty period, please contact your retailer/reseller/SilverStone authorized distributors or SilverStone **http://www.silverstonetek.com**.
   Please note that: (i) You must provide proof of original purchase of the product by a dated itemized receipt; (ii) You shall bear the cost of shipping (or otherwise transporting) the product to SilverStone authorized distributors. SilverStone authorized distributors will bear the cost of shipping (or otherwise transporting) the product back to you after completing the warranty service; (iii) Before you send the product, you must be issued a Return Merchandise Authorization ("RMA") number from SilverStone. Updated warranty information will be posted on SilverStone's official website. Please visit **http://www.silverstonetek.com** for the latest updates.

Additional info & contacts

For North America (usasupport@silverstonetek.com)
SilverStone Technology in North America may repair or replace defective product with refurbished product that is not new but has been functionally tested. Replacement product will be warranted for remainder of the warranty period or thirty days, whichever is longer. All products should be sent back to the place of purchase if it is within 30 days of purchase, after 30 days, customers need to initiate RMA procedure with SilverStone Technology in USA by first downloading the "USA RMA form for end-users" form from the below link and follow its instructions.
http://silverstonetek.com/contactus.php

For Australia only (support@silverstonetek.com)
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.
You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.
You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
Please refer to above "Warranty terms & conditions" for further warranty details.

SilverStone Technology Co., Ltd. 12F No. 168 Jiankang Rd., Zhonghe Dist., New Taipei City 235 Taiwan R.O.C. + 886-2-8228-1238
(standard international call charges apply)

For Europe (support.eu@silverstonetek.de)
For all other regions (support@silverstonetek.com)

SilverStone Technology Co., Ltd.

www.silverstonetek.com

support@silverstonetek.com

NO:G11222430

SILVERSTONE®
Designing Inspiration

PRECISION SERIES PS11

A VERSATILE ATX TOWER CASE FOR PERFORMANCE OR SILENCE

(W)

(Q)

Special Features

Quick access filters for easy cleaning
Motherboard back plate opening for quick CPU cooler assembly
Mesh front panel intake maximizes airflow with side window for viewing system innards (PS11-W)
Front-side intake vents with foam padded side panels to minimize noise (PS11-Q)
All black painted interior for stylish look
Support graphics cards up to 16.2 inches

Specifications

Model No.	SST-PS11B-W / SST-PS11B-Q	
Material	Mesh front panel, steel body (SST-PS11B-W) / Plastic front panel, steel body (SST-PS11B-Q)	
Motherboard	ATX , Micro ATX	
Drive Bay	External	5.25" x 2
	Internal	3.5" x 3 , 2.5" x 2
Cooling System	Front	2 x 120mm/140mm fan slot, included 1x 120mm 1200rpm fan
	Rear	1 x 120mm fan slot
	Top	2 x 120mm fan slot (PS11-W)
	Bottom	1 x 120mm fan slot
Expansion Slot	7	
Front I/O Port	USB 3.0 x 2 / Audio x 1 / MIC x 1	
Power Supply	Optional Standard PS2 (ATX)	
Expansion Card	Compatible with expansion cards up to 16.2" , width restriction - 6.1"	
Limitation of CPU cooler	161mm	
Limitation of PSU	225mm	
Dimension	215.3mm (W) x 426.5mm (H) x 481.5mm (D), 44L	

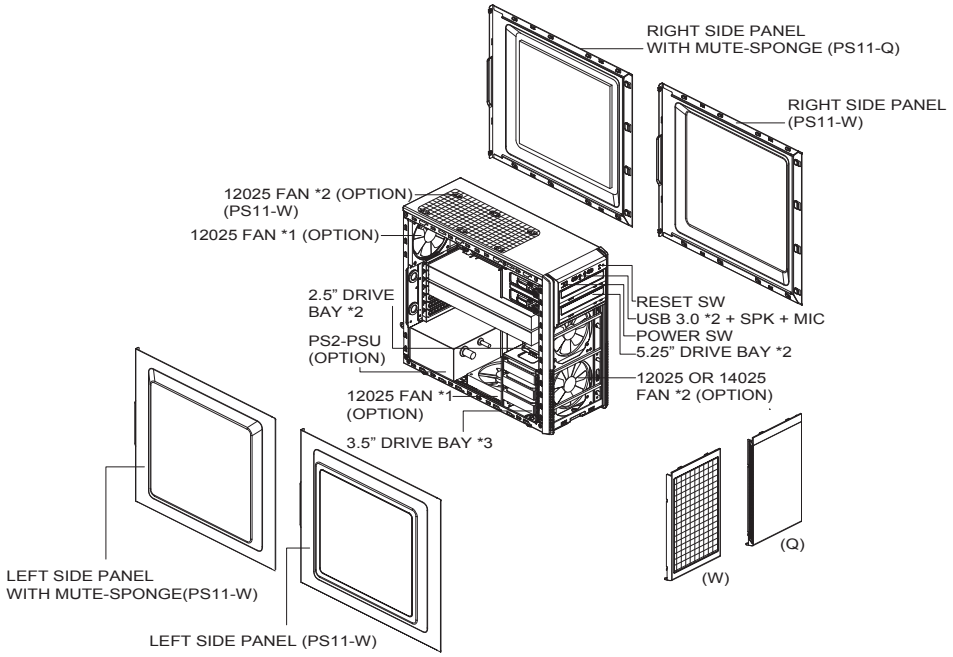

PICTURE	ITEM	PURPOSE
	SCREW-P/W-M3*4-BK	SECURE 2.5" HDD, 5.25"DRIVE
	SCREW-I-6-32*5-BK	SECURE PSU, MB, 3.5"HDD
	STANDOFF-6-32*6.5H-6-32	SUPPORT MB
	STANDOFF-SOCKET-WRENCH	STANDOFF SCREWS
	BUNCH-WIRE-TIES	CABLE MANAGEMENT
	LOCK	SECURITY LOCK

5.25" Device Installation

ENGLISH
Remove front panel as indicated in the diagram

DEUTSCH
Frontblende wie abgebildet entfernen

FRANÇAIS
Retirez le panneau frontal comme indiqué dans le diagramme

ESPAÑOL
Retire el panel frontal como se indica en el diagrama

ITALIANO
Rimuovere il pannello frontale come indicato nella figura

РУССКИЙ
Снимите лицевую панель, как показано на рисунке

繁體中文
請依圖示由面板正面取下擋版

日 本 語
図示されるようにフロントパネルを取り外します

한 국 어
그림과 같이 전면 패널을 분리합니다

简体中文
请依图示由面板正面取下挡版

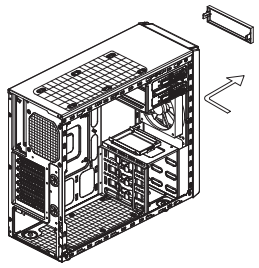

ENGLISH
① Slide 5.25" device from the outside into the bay until it locks into place
② Secure with screws from both side

DEUTSCH
①5,25-Zoll-Gerät von außen in den Schacht schieben, bis es einrastet
②Mit Schrauben von beiden Seiten sichern

FRANÇAIS
①Insérez le périphérique 5,25" de l'extérieur dans la baie jusqu'à ce qu'il s'enclenche
②Fixez avec des vis de chaque côté

ESPAÑOL
①Deslice el dispositivo de 5,25" desde el exterior hacia la bahía hasta que encaje en su sitio
②Asegure con tornillos desde ambos lados

ITALIANO
①Far scorrere il dispositivo da 5.25" dall'esterno verso l'interno dell'alloggio finché si blocca in posizione
②Fissare con viti su entrambi i lati

РУССКИЙ
①Установите 5,25-дюймовое устройство в отсек до его фиксации.
②Закрепите винтами с обеих сторон.

繁體中文
①直接將5. 25”裝置推入到定位後會自動鎖上，
②於兩側鎖上螺絲固定

日 本 語
①5. 25”デバイスを外側からスライドさせて固定されるまでベイに入れます
②ネジで両側を固定します。

한 국 어
①5.25" 장치를 제자리에 고정될 때까지 바깥쪽에서 베이로 밀어 넣습니다.
②양쪽 나사로 고정합니다.

简体中文
①直接将5. 25”装置推入到定位后会自动锁上，
②于两侧锁上螺丝固定

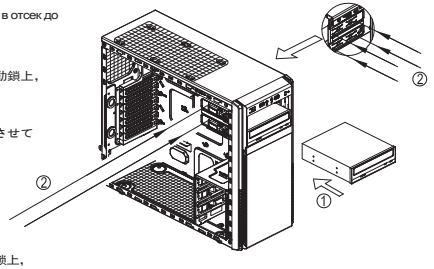

ENGLISH
To remove device, push the tool-less tab forward and pull device out

DEUTSCH
Zum Entfernen des Geräts die Nase nach vorne drücken (kein Werkzeug erforderlich) und das Gerät herausziehen

FRANÇAIS
Pour retirer le périphérique, poussez l'onglet d'ouverture sans outil vers l'avant et tirez pour le faire sortir

ESPAÑOL
Para retirar el dispositivo, empuje hacia delante la pestaña sin herramientas y tire del dispositivo

ITALIANO
Per rimuovere il dispositivo, spingere in avanti la linguetta ed estrarre il dispositivo

РУССКИЙ
Для извлечения устройства нажмите на фиксатор и вытащите устройство.

繁體中文
要移除的話將免工具扣具扭頭往前推後將裝置抽出

日 本 語
装置を取り外すには、ツール不要タブを前に押して、デバイスを引き出します。

한 국 어
장치를 분리하려면, 공구 사용이 필요 없는 끝부분을 앞쪽으로 민 후 장치를 당겨 뺍니다.

简体中文
要移除的话将免工具扣具扭头往前推后将装置抽出

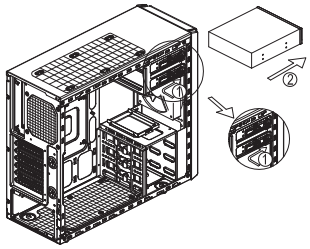

3.5" Hard Drive Installation

ENGLISH
①Pull the tab of tool-less bracket outward
②Slide drive in with SATA interface facing inwards until it locks into place

DEUTSCH
①Nase der Halterung nach außen ziehen (kein Werkzeug erforderlich)
②Laufwerk mit der SATA-Schnittstelle nach innen zeigend bis zum Einrasten hineinschieben

FRANÇAIS
①Tirez l'onglet du support sans outil vers l'extérieur
②Insérez le disque avec l'interface SATA tournée vers l'intérieur jusqu'à ce qu'il s'enclenche

ESPAÑOL
①Tire de la pestaña del bracket sin herramientas hacia fuera
②Deslice el dispositivo en el interfaz SATA mirando hacia el interior hasta que encaje en su sitio

ITALIANO
①Tirare verso l'esterno la linguetta della staffa ad incastro
②Far scorrere l'unità con l'interfaccia SATA rivolta verso l'interno finché non si blocca in posizione

РУССКИЙ
①Потяните фиксатор кронштейна наружу.
②Установите привод диска таким образом, чтобы разъем SATA был направлен внутрь, и нажмите до фиксации привода.

繁體中文
①將免工具支架往外扳開後，
②SATA端朝內放入硬碟，推到底即可被免扣具裝置固定

日 本 語
①ツール不要ブラケットのタブを外側へ引きます。
②ドライブはSATAインターフェースを内側に向けて、きちんと固定されるまで中に入れます。

한 국 어
①공구 사용이 필요 없는 브래킷의 끝부분을 바깥쪽으로 당겨 뺍니다.
②SATA 인터페이스를 안쪽으로 향하게 한 채로 드라이브가 제자리에 고정될 때까지 안으로 밀어 넣습니다.

简体中文
①将免工具支架往外扳开后，
②SATA端朝内放入硬盘，推到底即可被免扣具装置固定

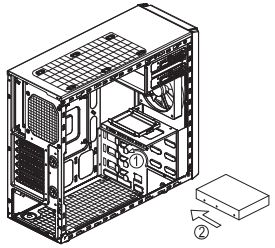

ENGLISH
①To remove drive, first pull tool-less tab outward
②Then pull drive out.

DEUTSCH
①Zum Entfernen des Laufwerks zunächst die Nase nach außen ziehen (kein Werkzeug erforderlich)
②Dann das Laufwerk herausziehen.

FRANÇAIS
①Pour retirer le disque, tirez en premier l'onglet d'ouverture sans outil vers l'extérieur
②Puis retirez le disque.

ESPAÑOL
①Para retirar el dispositivo, primero tire de la pestaña sin herramientas hacia fuera
②Luego tire del dispositivo hacia fuera.

ITALIANO
①Per rimuovere l'unità, prima tirare verso l'esterno la linguetta
②Quindi estrarre l'unità.

РУССКИЙ
①Для извлечения диска потяните фиксатор наружу.
②Затем извлеките привод диска.

繁體中文
①移除時先將扣具扳開
②將硬碟向外抽出

日 本 語
①ドライブを取り出すには、ツール不要ブラケットのタブを外側へ引きます
②それから、ドライブを引き出します。

한 국 어
①드라이브를 분리하려면, 먼저 공구 사용이 필요 없는 탭을 바깥쪽으로 당깁니다.
②그다음 드라이브를 당겨 뺍니다.

简体中文
①移除时先将扣具扳开
②将硬盘向外抽出

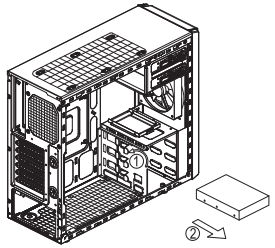

2.5" HDD/SSD Installation

ENGLISH
①Remove thumbscrew
②Remove 2.5"tray by lifting it

DEUTSCH
①Rändelschraube entfernen
②2,5-Zoll-Fach durch Anheben entfernen

FRANÇAIS
①Enlevez les vis à oreilles.
②Enlevez le plateau 2,5" en le soulevant.

ESPAÑOL
①Quite el tornillo mariposa
②Retire la bandeja de 2,5" levantándola

ITALIANO
①Rimuovere la vite a testa zigrinata
②Rimuovere il cassetto 2.5" sollevandolo

РУССКИЙ
①Отверните барашковый винт.
②Приподнимите и извлеките 2,5-дюймовый отсек.

繁體中文
①將手扭螺絲取下
②向上提取即可取出2. 5”硬碟架

日 本 語
①つまみネジを取り外します。
②2. 5”トレイは上方に取り外します。

한 국 어
①나비 나사를 제거합니다.
②2.5" 트레이를 들어올려 분리합니다.

简体中文
①将手扭螺丝取下
②向上提取即可取出2. 5”硬盘架

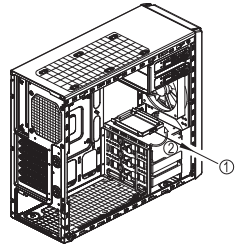

ENGLISH
①Place drive into tray and secure with screws
②Follow above steps in reverse to complete installation

DEUTSCH
①Laufwerk in das Fach einsetzen und mit Schrauben sichern
②Obige Schritte zum Abschließen der Installation in umgekehrter Reihenfolge befolgen

FRANÇAIS
①Mettez le disque dans le support et attachez-le avec des vis
②Suivez les étapes ci-dessus dans l'ordre inverse pour terminer l'installation

ESPAÑOL
①Sitúe el dispositivo en la bandeja y fíjelo con tornillos
②Siga los pasos anteriores en orden inverso para completar la instalación

ITALIANO
①Collocare l'unità nel cassetto e fissarla con le viti
②Attenersi alle istruzioni di cui sopra in ordine inverso per completare l'installazione

РУССКИЙ
①Установите привод в отсек и закрепите винтами.
②Для завершения установки выполните описанные выше операции в обратном порядке.

繁體中文
①將硬碟放入托盤後用螺絲鎖固
②依照反順序裝回托盤即可

日 本 語
①ドライブをトレイに入れて、ネジで固定します。
②インストールを完了するには、上記のステップを逆順に実行します。

한 국 어
①드라이브를 트레이에 넣고 나사로 고정합니다.
②설치를 하려면 위의 단계를 역으로 따라하면 됩니다.

简体中文
①将硬盘放入托盘后用螺丝锁固
②依照反顺序装回托盘即可